


Air Conditioning Systems

ZONE CONTROLLER PRODUCT FLYER


System components

Parts	Specifications
Zone controller	Make sure the correct zone controller is selected from the following 4 models. » Maximum 4 of 240 V AC damper motor connecting type: PAC-ZC40H-E » Maximum 8 of 240 V AC damper motor connecting type: PAC-ZC80H-E » Maximum 4 of 240 V AC damper motor connecting type: PAC-ZC40L-E » Maximum 8 of 240 V AC damper motor connecting type: PAC-ZC80L-E
Zone remote controller	A maximum of 2 remote controllers can be connected. 1x remote controller is included in the Zone Controller, Additional remote part# : PAR-ZC01M-E
Temperature sensors	A maximum of 5 temperature sensors » Intake air temperature sensor in the indoor unit » Temperature sensor in the main remote controller » Temperature sensor in the sub remote controller » Optional temperature sensor 1: PAC-SE41TS-E » Optional temperature sensor 2: PAC-SE41TS-E They can be assigned to each of the zones
Damper motor (locally supplied)	Only drive open, drive close damper motor can be connected. (Spring motor damper can not be used) If 24 V AC motors are used ensure the transformer is adequately sized for the zone motors connected and ensure it's suitable for the installation conditions.

External dimensions

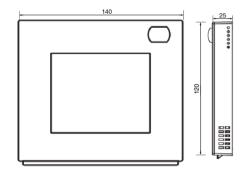

Zone remote controller

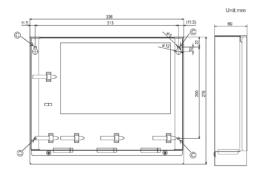

Zone control interface



MitsubishiElectric.com.au




Zone Controller

Mitsubishi Electric introduces the Zone Controller that has the ability to control 4 or 8 zones. The Zone Remote Controller allows monitoring of the air conditioning unit and zones. Schedule operation of unit and zones are also available. Equipped with three built-in sensors (temperature, brightness & occupancy) which allows for comfortable air environment and also helps to reduce energy consumption.



Easy operation

- » Back light LCD and large display for high visibility and simple operation
- » Touch panel LCD for easy usage
- » LED light indicator indicate the operation status in different colours (Red: Heat, Blue: Cool etc)
- » Built-in temperature sensor detects the room temperature and displays it on the screen
- » Built-in occupancy sensor detects a person and operates the unit accordingly
- » Built-in brightness sensor operates the unit according to the surrounding brightness level

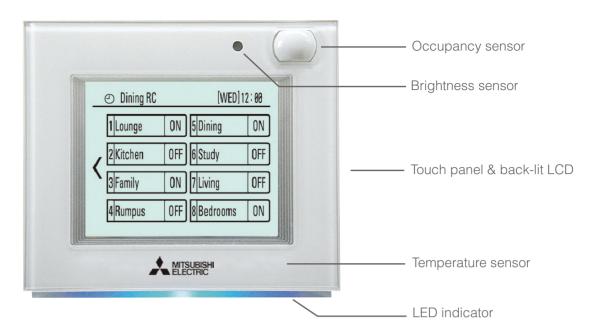

Fan speed control


When the fan speed of the unit is set to auto, it will control the fan speed according to the

Averaging sensor control

The Zone controller has 5 sensors in the system (Main RC, Sub RC, Optional Sensor 1, Optional difference between set and space temperature. the unit is based on averaging of the sensors of anywhere via smart-phone, tablet or computer. the active zones..

Wi-Fi control

With the use of optional Wi-Fi interface (MAC - 558IF-E) and active Internet, users will number of opened outlets and the temperature Sensor 2 and outdoor unit sensor). Control of be able to control the air conditioners from

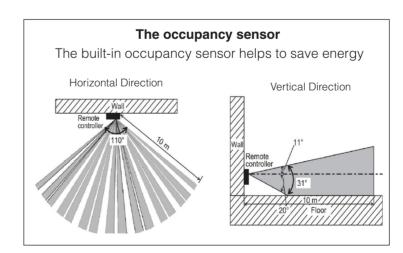

Energy-save control mode	Control when vacancy is detected
Non-use	-
ON/OFF	The unit will be turned off
Set temperature offset	The set temperature will be offset
Fan speed down	The fan speed will be set to "Low"
Zones-off	The zones will be off

Energy save functions

- » Energy save control will turn on when the occupancy sensor detects room/area vacancy
- » The occupancy sensor detects the occupancy based on movements and also the temperature difference between the occupant and its surroundings.
- » Only one of the energy-saving controls can be used at any time.
- » Energy-saving mode can be deactivated according to the lighting level detected by the brightness sensor (while occupants are sleeping at